



Series GSTC Carbon Monoxide/Nitrogen Dioxide Gas Transmitter

Specifications - Installation and Operating Instructions




Wall Mount
With LCD




Wall Mount
Without LCD



Duct Mount

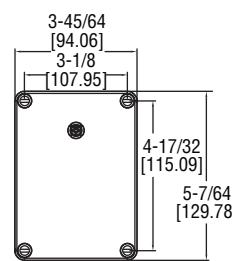

Wall Mount

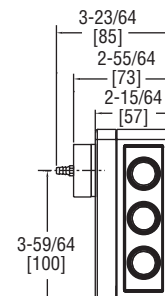

Duct Mount

The Series GSTC Carbon Monoxide/Nitrogen Dioxide Gas Transmitter monitors the gas concentration in underground parking garages and loading docks. The carbon monoxide transmitter is used to measure the exhaust of gasoline engines, while the nitrogen dioxide transmitter is used for diesel engines. The Series GSTC is compatible with either BACnet or MODBUS[®] communication protocol, allowing the transmitter to be used with almost any building management controller. The GSTC output is communicated over an RS-485 wire via BACnet or MODBUS[®] communication protocol. To maximize the accuracy of the Series GSTC, the sensor can be field-calibrated using the A-449 remote LCD display. When the sensor reaches the end of its life, the display will indicate that the sensor needs to be replaced.

BACnet and MODBUS[®] communication protocol recommend limiting the number of nodes in any segment to 32. Therefore, the transceiver may be rated at one unit load. Fractional loads are also acceptable. The Series GSTC accounts as an eighth of a load on the MSTP network.

WARNING Disconnect power supply before installation to prevent electrical shock and equipment damage. Make sure all connections are in accordance with the job wiring diagram and in accordance with national and local electrical codes. Use copper conductors only.

NOTICE Use electrostatic discharge precautions (e.g., use of wrist straps) during installation and wiring to prevent equipment damage.

NOTICE Avoid locations where severe shock or vibration, excessive moisture, or corrosive fumes are present.

NOTICE Do not exceed ratings of this device, permanent damage not covered by warranty may result.

NOTICE The electrochemical sensors should be stored in an environment with a minimum humidity level of 20% RH. If the sensor dries out, replacements will not be covered under warranty, but they can be revived by allowing them to stabilize in an environment above 40% RH for 10 days. Once revived, they need to be recalibrated before use.

INSTALLATION

NOTICE These are general guidelines. Local laws or ordinances will take precedence.

- The transmitter should be mounted at normal breathing height, approximately 5 to 6 ft above the floor.
- The unit may be mounted in the horizontal or vertical position. It should be mounted in an area that is shielded from direct contact with the elements or direct sunlight.
- Mount in an area that will prevent the sensor from having any direct contact with water.
- The unit should be placed in an area that will give an average of the air quality. Do not place the unit so it will receive direct engine exhaust. Prolonged exposure to direct engine exhaust may damage the sensor.

SPECIFICATIONS

- Sensor:** Field replaceable electrochemical, 4 years typical lifespan.
- Range:** CO: 0 to 500 PPM, NO₂: 10 PPM.
- Output Drift:** <5% per year in air.
- Coverage Area:** 5000 to 7500 sq ft typical.
- Accuracy:** CO: 2% FS, NO₂: 3% FS, at the time of calibration.
- Resolution:** CO: 1 PPM; NO₂: 0.1 PPM.
- Temperature Limits:** -4 to 122°F (-20 to 50°C).
- Storage Temperature:** For best sensor life, 32 to 68°F (0 to 20°C).
- Humidity Limits:** 15 to 90% RH constant; 0 to 99% RH intermittent.
- Response Time:** <45 s to 90% CO, <25 s to 90% NO₂.

- Span and Zero Adjustment:** Via pushbutton, using optional A-449 display. Zero only via BACnet or MODBUS[®] communication protocol.
- Housing:** UV resistant glass filled polycarbonate.
- Output Signals:** BACnet MS/TP or MODBUS[®] RTU (switch selectable) communication protocol.
- Power Requirements:** 10 to 36 VDC or isolated 21.6 to 33 VAC.
- Electrical Connection:** Removable terminal block, knock outs for conduit fitting.
- Calibration:** Via pushbuttons using A-449 auxiliary display. Span gas concentration is field selectable.
- Enclosure Rating:** IP64.
- Weight:** 1 lb (0.45 kg).
- Agency Approvals:** CE.

Figure 1 shows the location of the wiring terminal, 8 position DIP Switch SW1, used for configuring the RS-485 address, the 4 position DIP Switch SW2, used for configuring hardware and software options, sensor, span and zero adjustments, and status LEDs.

The device provides three LEDs to indicate status and activity. The LEDs are located to the right of DIP Switch SW1. The yellow LED indicates that the unit is sending a BACnet or MODBUS[®] communication protocol. The green LED indicates the unit is receiving a BACnet or MODBUS[®] communication protocol addressed to this specific device. The red LED will flash once periodically if the BACnet or MODBUS[®] communication protocol address is set incorrectly or the red LED will flash twice periodically if the auto serial configuration is in progress.

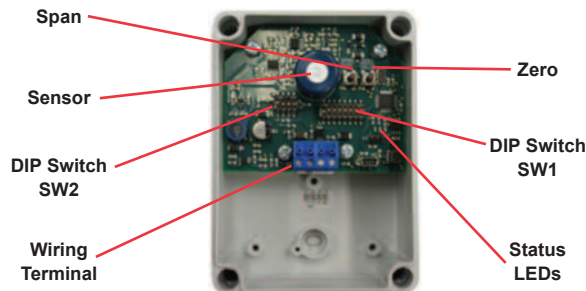


Figure 1

Wall Mounting

1. Remove the cover plugs from the face of the unit and the top cover.
2. Disconnect the display cable from the USB connector on the main circuit board (if present).
3. Remove the desired conduit fitting knock out and install conduit fitting (not provided).
4. Position the transmitter where it is to be mounted and mark the mounting holes in each corner of the housing.
5. Drill or punch out marked locations.
6. Place the transmitter box over mounting holes on wall and align. Install wall mount screws (not provided) in mounting holes.
7. Proceed with wiring diagrams according to Figures 3 and 4.
8. Set DIP Switches SW1 and SW2 as desired. Refer to Figure 5, Figure 6, and Appendix I.
9. Reconnect the LCD cable to the USB port on the main circuit board (if present).
10. Replace cover and cover plugs on the face of the unit.

CO:

Locate GSTC carbon monoxide transmitter about 5 ft (1.5 m) off the floor. Carbon monoxide weighs about the same as air and distributes evenly throughout the monitored space. Install GSTC CO alarm at least 15 to 20 ft (4.6 to 6.1 m) away from boiler or fuel burning heat source. Avoid extremely dusty, dirty, humid or greasy areas. Do not place in direct sunlight or areas subjected to extreme temperature. Do not place in turbulent air, near fans, heat vents, air conditioners, air returns or open windows. Blowing air may prevent CO from reaching the CO sensor.

NO₂:

NO₂ sensors should be mounted in the breathing zone, 4 to 6 ft (1.2 to 1.8 m) from the floor. This is primarily because NO₂ is a poisonous gas which should be detected in the area where people would be exposed to it, but also because 4 to 6 ft from the floor is an appropriate elevation to detect NO₂ gas.

Duct Mounting

Duct mounting kit includes an air flow pitot tube, air filter with barbed connections, two short pieces of tubing, and one long piece of tubing.

1. Mount the pitot tube into the duct observing the flow direction marked on the pitot tube.
2. Attach the two short pieces of tubing to the barbed connections on each side of the air filter. See Figure 2.
3. Attach the remaining side of one of the short pieces of tubing to the barbed connection on the transmitter.
4. Attach the remaining side of the other short piece of tubing to the high port on the pitot tube.
5. Attach the long piece of tubing to the open barbed connection on the transmitter.
6. Attach the other end of the long tubing to the low port on the pitot tube.



Figure 2

WIRING

NOTICE Wiring should comply with Electrical Characteristics of Generators and Receivers for Use in Balanced Digital Multipoint Systems, TIA-EIA-485-A-1998, Telecommunications Industry Association, 1998.

NOTICE BACnet installations should comply with ANSI/ASHRAE Standard 135-2010 BACnet A Data Communication Protocol for Building Automation and Control Networks, American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc., 2010.

NOTICE MODBUS® communication protocol installations should comply with MODBUS® communication protocol over Serial Line Specification and Implementation Guide V1.02, MODBUS® Organization, Inc., 2006.

NOTICE Communication wiring must be in a daisy-chain fashion. Star connections are not permitted.

NOTICE Cable shield must be connected to earth ground at one location only.

Figure 3 shows how to connect the GSTC in a network containing a common power supply. Use a cable containing two twisted pairs. One pair is to be used for the power and common. The other pair is to be used for A(-) and B(+). Attach the shields together with a wire nut. This configuration is not suitable for AC supplies. Use a DC supply only. Care should be taken that there are not too many devices powered from the same supply as voltage drops will occur in the wiring. If you have many devices, or have long cable runs, the local supply configuration, shown in Figure 4, may be a better choice.

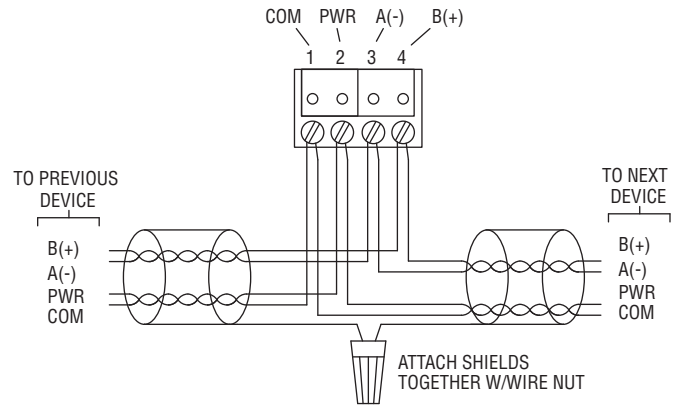


Figure 3 - Common Power Supply

Figure 4 shows how to connect the GSTC in a network containing individual local supplies. Use a cable containing a single conductor and a twisted pair. The single conductor is to be used for common, and the pair is to be used for A(-) and B(+). Attach the shields together with a wire nut. Both AC and DC supplies are suitable for this configuration.

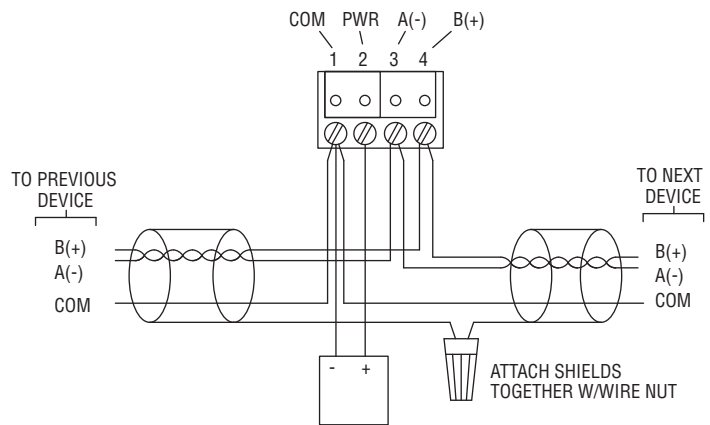


Figure 4 - Local Power Supply

All devices in the network should be daisy-chained. Star connections and T connections are not permitted.

The A(-) and B(+) lines must be terminated at both ends with a 120 ohm resistor. If the GSTC is an end device it has an on-board resistor that may be used. See Table 1 to enable it.

The network must be biased properly. If needed, there are bias resistors on-board the GSTC. No more than two sets of bias resistors should be enabled in the network. See Table 1 to enable them.

Dip Switch Configurations

Use DIP Switch SW1 (see Figure 5) to configure the RS-485 address of the device. A valid address depends on the protocol selected. Valid BACnet addresses range from 1 to 127. Valid MODBUS® communication protocol addresses range from 1 to 247. By default, the device is shipped with MODBUS® communication protocol selected and the address set to 127, as shown in Figure 5. A valid and unused address should be set before connecting to an existing network. See Appendix I to configure the required address using DIP Switch SW1. The device will not function properly if an invalid address is set. During the power up sequence, the LCD (if present) will display the RS-485 address as the primary value and either "BAC" to indicate BACnet or "MOD" to indicate MODBUS® communication protocol as the primary text. If the RS-485 address is invalid, the invalid address is shown as the primary value with "ERR" as the primary text, and the red LED will periodically blink once.

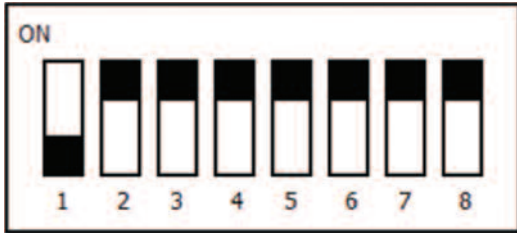


Figure 5

Use DIP Switch SW2 (see Figure 6) to configure other hardware and software options. Table 1 shows available options. Table 2 shows supported configurations for either BACnet or MODBUS® communication protocol.

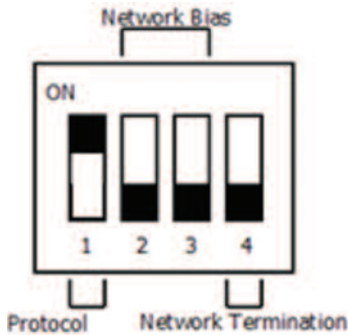


Figure 6

Switch	On	Off
1 - Protocol	MODBUS®	BACnet
2 - B(+) Bias Resistor	511Ω Pull-up to 5V	Pull-up not connected
3 - A(-) Bias Resistor	511Ω Pull-down to GND	Pull-down not connected
4 - Terminating Resistor	120Ω between A(-) and B(+)	Open

Table 1: Dip Switch SW2 Functions

Auto Serial Configuration

Use the auto serial configuration to enable the device to determine the baud rate, parity, and stop bits directly from the serial traffic. After a valid RS-485 address is chosen, the GSTC can be quickly and easily deployed. The auto serial configuration procedure assumes a serial configuration appropriate to the chosen protocol, shown in Table 2. Otherwise, the serial communication must be configured manually in the setup menu.

Protocol	Supported Baud Rates	Data Size	Parity	Stop Bits
BACnet	9600	8	None	1
	19200		Even	1
38400	Odd			
57600			None	2
76800	None		2	
115200				

Table 2: Supported Configurations

To activate auto serial configuration, set a valid RS-485 address using DIP Switch SW1, connect the serial bus, common and power wires, and apply power. The device will power up and begin examining the serial bus for communication.

When the device is installed offline or away from the main network, it is necessary to generate the appropriate traffic in order to configure the serial communication whether BACnet or MODBUS® communication protocol is selected. While the serial configuration is in progress, the device may not respond. The device may require multiple read requests to complete the serial configuration process.

The auto serial configuration process is completed once a message addressed to the device is received and processed successfully. If the serial configuration of the bus changes, a power cycle of the device is required to restart the auto serial configuration process.

More detailed information for BACnet protocol can be found in Appendix II, and information for MODBUS® communication protocol can be found in Appendix III.

MENU

The menu is only shown if a display is present. Figure 7 below outlines the display components. To enter the menu, press and hold both the SPAN and ZERO pushbuttons for at least 3 seconds. The menu descriptions and list of the available values for each standard menu item is shown on in Table 3. Table 4 lists the available values for each manual menu item.

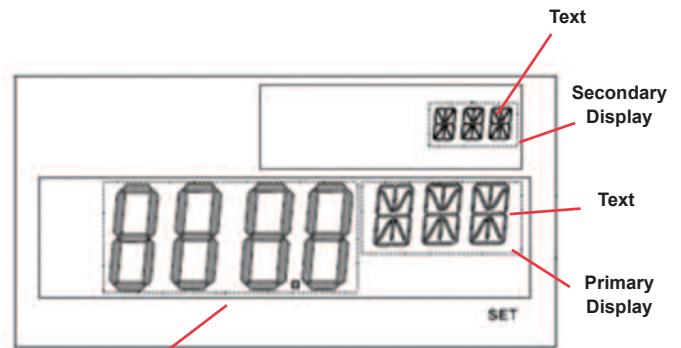


Figure 7

Standard Menu Descriptions

BAC or MOD:	Displays the RS-485 address
CAL:	Start user CO or NO2 calibration process
AUT:	Auto serial configuration enabled
RST:	Reset settings to factory default

Manual Menu Descriptions

BAU:	Baud rate selection (only available if AUT = OFF)
PAR:	Parity selection (only available if AUT = OFF)
STP:	Stop bits selection (only available if AUT = OFF)

Menu Navigation

A menu flowchart, located in Appendix IV, illustrates the navigation process.

1. Press and hold the SPAN pushbutton while in the menu to move to the previous menu item.
2. Press and hold the ZERO pushbutton while in the menu to move to the next menu item.
3. Press and hold both the SPAN and ZERO pushbuttons for 5 seconds to activate the current menu item. In the lower left corner of the display "SET" is shown to indicate a setting change.
4. Press and hold either the SPAN or ZERO pushbutton to change the setting.
5. Press and hold both the SPAN and ZERO pushbuttons for 5 seconds to accept the setting.
6. After 30 seconds of inactivity, the display will return to normal operation.

Menu Name	Value	Description
BAC or MOD	xxx ADR	RS-485 address (view only)
CAL	xxx PPM	Current CO or NO2 concentration
AUT	ON	Auto-baud will start and return to the main menu
	OFF	Starts the manual serial configuration menu sequence
RST	NO	
	YES	Will reset settings to factory default

Table 3: Standard Menu Options

Menu Name	Value	Description
BAU	9600	Only available if AUT = OFF
	19200	
	38400	
	57600	
	76800	
PAR	115200	Only available if AUT = OFF
	EVE	
	ODD	
STP	NON	Only available if AUT = OFF
	1	
	2	

Table 4: Manual Menu Options

SENSOR REPLACEMENT

A replacement sensor is available from Dwyer Instruments, Inc.
 For CO, order part number: A-505.
 For NO₂, order part number: A-506.

WARNING Sensors contain acid and are harmful if handled improperly. Do not attempt to open sensors. Sensors should be disposed of according to local laws.

Replacing The Sensor

1. Remove the cover plugs from the face of the unit and top cover. Locate the sensor, see Figure 1. The sensor is mounted on three pin sockets. The circuit board is either labeled "CO SENSOR" or "NO2 SENSOR" underneath the sensor.
2. Remove and discard the used sensor.
3. Remove the shorting wire spring located at the bottom of the new sensor.
4. Install the new sensor into the three pin sockets.
5. The unit must be re-calibrated whenever a new sensor is installed.
6. Allow 30 minutes for the unit to come to temperature equilibrium prior to calibration. The unit has internal temperature compensation, and the sensor must be at the same temperature as the unit to calibrate properly.

CALIBRATION

Figure 8, located after Appendix III, shows how to set up a GSTC for calibration with an auxiliary display. An auxiliary display is required for calibration unless an LCD model of the GSTC was purchased. The procedure in Appendix IV shows how to set the range, and calibrate the span and zero adjustments.

MAINTENANCE/REPAIR

Upon final installation of the Series GSTC, no routine maintenance is required with the exception of sensor replacement and calibration. As with all electrochemical type gas sensors, routine calibration is required. It is recommended that units be re-calibrated at 6 month intervals, to maintain the published accuracy, or as required by local ordinances or other requirements. The units will maintain 5% accuracy if they are re-calibrated at 12 month intervals.

Except for the sensor replacement and calibration, the Series GSTC is not field serviceable and should be returned if repair is needed. Field repair should not be attempted and may void warranty.

WARRANTY/RETURN

Refer to "Terms and Conditions of Sales" in our catalog and on our website. Contact customer service to receive a Return Goods Authorization number before shipping the product back for repair. Be sure to include a brief description of the problem plus any additional application notes.

Appendix I: Setting the RS-485 Address

The address assignment is determined by adding the values for each of the switches that are in the "ON" position. The transmitter comes from the factory with all of the DIP switches in the "ON" position, except position 1 as shown in Figure 9 below.

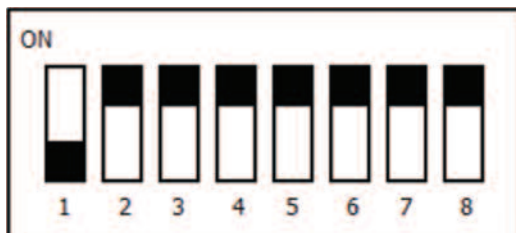


Figure 9

The address of the transmitter in Figure 9 is 127. This final value is determined by adding the individual values of the DIP switches together. The values for each DIP switch are shown below in Table 5. When adding the individual values for Figure 9, $0+64+32+16+8+4+2+1=127$, which is the correct factory setting.

Switch Positions	1	2	3	4	5	6	7	8
Address Value	128	64	32	16	8	4	2	1

Table 5: DIP Switch Values

Another example would be if the desired address was 53. The only DIP switches in the "ON" position would be switches 3, 4, 6, and 8 as shown in Figure 10 below. By adding the individual values of each switch in the "ON" position, $0+0+32+16+0+4+0+1=53$, the desired address is obtained.



Figure 10

NOTICE The minimum possible address would be 0 when all DIP switches are in the "OFF" position, and the maximum possible address would be 255 when all DIP switches are in the "ON" position. When BACnet protocol is selected the transmitter only has valid address from 1 to 127. When MODBUS® communication protocol is selected the transmitter only has valid address from 1 to 247. Any address outside the selected protocol's range will give an error.

Appendix II: BACnet Protocol

The GSTC supports objects that are listed below. Table 6 and Table 7 outlines each item.

Object Type	Dynamically Creatable	Dynamically Deletable	Object Identifier	Object Name
Device	No	No	607xxx	GSTC
Analog Input	No	No	AI1	CO Concentration NO2 Concentration
Binary Value	No	No	BV1	Zero Sensor
Date Value	No	No	DV1 DV2	Calibration Date Replace Sensor Date

Table 6: Supported BACnet Objects

Property	Default Value	Property Data Type	Access
Object Identifier	607xxx	BACnetObjectIdentifier	Read/Write
Object Name	"GSTC 607xxx"	CharacterString (32)	Read/Write
Object Type	DEVICE (8)	BACnetObjectType	Read
System Status	Operational (0)	BACnetDeviceStatus	Read
Vendor Name	"Dwyer Instruments, Inc"	CharacterString	Read
Vendor Identifier	607	Unsigned	Read
Model Name	"GSTC-C" or "GSTC-N"	CharacterString	Read
Firmware Revision	"?.?"	CharacterString	Read
Application Software Version	"?.?"	CharacterString	Read
Location	""	CharacterString (32)	Read/Write
Description	"CO Detector" or "NO2 Detector"	CharacterString (32)	Read/Write
Protocol Version	1	Unsigned	Read
Protocol Revision	12	Unsigned	Read
Protocol Services Supported	See pics	BACnetServicesSupported	Read
Protocol Object Types Supported	See Table 2	BACnetObjectTypesSupported	Read
Object List	See Table 2	BACnetArray	Read
Maximum APDU Length Accepted	128	Unsigned	Read
Segmentation Supported	NO_SEGMENTATION (3)	BACnetSegmentation	Read
APDU Timeout	0	Unsigned	Read
Number of APDU Retries	0	Unsigned	Read
Max Master	127	Unsigned	Read/Write
Max Info Frames	1	Unsigned	Read
Devices Address Binding	Empty	BACnetAddressBinding	Read
Database Revision	1	Unsigned	Read
Serial Number (1000)	"xxxxxx"	CharacterString	Read

Table 7: Object Properties

The default object identifier is 607xxx, where xxx is replaced by the address set by the DIP Switch SW1. The object identifier value will change as the address changes. When a specific object identifier is written via BACnet, that value is stored and changes to the address will no longer affect the object identifier. The object name reflects the current object identifier. When a specific object name is written via BACnet, that value is stored and changes to the object identifier will no longer affect the object name.

Table 8 outlines the Analog Input (AI1) object which represents the current CO or NO2 concentration reading in parts per million.

Property	Default Value	Property Data Type	Access
Object Identifier	AI1	BACnetObjectIdentifier	Read
Object Name	"CO Concentration" or "NO2 Concentration"	CharacterString	Read
Object Type	ANALOG_INPUT (0)	BACnetObjectType	Read
Present Value	Current reading	Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Reliability	NO_FAULT_DETECTED(0)	BACnetReliability	Read
Out of Service	FALSE (0)	Boolean	Read/Write
Units	Parts-per-million (96)	BACnetEngineeringUnits	Read

Table 8: Analog Input

Table 9 outlines the Binary Value (BV1) object which allows the sensor to be remotely zeroed. When set to "ACTIVE", the zero function will attempt to recalibrate the zero point of the sensor.

Property	Default Value	Property Data Type	Access
Object Identifier	BV1	BACnetObjectIdentifier	Read
Object Name	"Zero Sensor"	CharacterString	Read
Object Type	BINARY_VALUE (5)	BACnetObjectType	Read
Present Value		Real	Read
Status Flags	0	BACnetStatusFlags	Read
Event State	0	BACnetEventState	Read
Reliability	NORMAL (0)	BACnetReliability	Read
Out of Service	NO_FAULT_DETECTED (0) FALSE (0)	Boolean	Read/Write

Table 9: Binary Value

Table 10 outlines the Date Value (DV1) object which stores the date when the sensor was last calibrated. Since the GSTC does not track time this value must be updated manually after calibration is performed in the field.

Property	Default Value	Property Data Type	Access
Object Identifier	DV1	BACnetObjectIdentifier	Read
Object Name	"Calibration Date"	CharacterString	Read
Object Type	DATE_VALUE (42)	BACnetObjectType	Read
Present Value	????	BACnetBinaryPV	Read/Write
Status Flags	{F,F,F,F}	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Reliability	NO_FAULT_DETECTED (0)	BACnetReliability	Read
Out of Service	FALSE (0)	Boolean	Read/Write

Table 10: Date Value

Table 11 outlines the Replace Sensor Date (DV2) object which stores the suggested sensor replacement date. It is recommended to replace the sensor at specific intervals because the sensor degrades over time. The GSTC does not track time so this value must be updated manually after the sensor is replaced in the field.

Property	Default Value	Property Data Type	Access
Object Identifier	DV2	BACnetObjectIdentifier	Read
Object Name	"Replace Sensor Date"	CharacterString	Read
Object Type	DATE_VALUE (42)	BACnetObjectType	Read
Present Value	????	BACnetBinaryPV	Read/Write
Status Flags	{F,F,F,F}	BACnetStatusFlags	Read
Event State	NORMAL (0)	BACnetEventState	Read
Reliability	NO_FAULT_DETECTED (0)	BACnetReliability	Read
Out of Service	FALSE (0)	Boolean	Read/Write

Table 11: Replace Sensor Date

BACnet Services

The GSTC supports the Device Communication Control Service BIBB. The option time duration in minutes is also supported. This device is configured with a password that must be provided to successfully execute the command. The password is "Dwyer".

The GSTC also supports the Reinitialize Device Service BIBB. The supported device states are "COLDSTART" and "WARMSTART". All other states return an error. This device is configured with a password that must be provided to successfully execute the command. The password is "Dwyer".

Appendix III: MODBUS® Communication Protocol

The GSTC supports functions and input registers that are listed below. Table 12 , Table 13, and Table 14 outline each item.

Function Name	Function Code
Read Holding Registers	03
Read Input Registers	04
Write Single Register	06
Write Multiple Registers	16

Table 12: Supported MODBUS® Functions

The string data type is read as a stream of ASCII characters with the first character sent in the MSB of the first register and the second character sent in the LSB of the first register and so on. If the string is shorter than the allotted size, the remaining bytes will be zero padded.

Register	Description	Data Type	Range
0001	CO or NO2 Concentration in PPM	Unsigned 16 bit integer	0 – 500 PPM CO, 0 – 100 (0 – 10.0) PPM NO2
1000-1009	Model Number String	String	"GSTC-C" or "GSTC-N"
1010-1013	Serial Number String	String	"xxxxxx"
1014-1017	Firmware Version String	String	"?.?"

Table 13: Input Registers

Register	Description	Data Type	Value	Range
0001	Zero Sensor	Unsigned 16bit integer	0-1	0 or 1
0500	Reboot device	Unsigned 16bit integer	0-1	0 - Do Nothing 1 - Warm Reset

Table 14: Holding Registers

Writing 1 to the Zero Sensor register will re-zero the sensor just as if the user has pressed the zero pushbutton.

The Reboot Device register allows a MODBUS® communication protocol master to remotely request this device to perform a warm reset. When a value of 1 is written to this register the device will respond with success. The reset will take approximately 5 seconds after the command was received. Writing a value of 0 to this register has no effect.

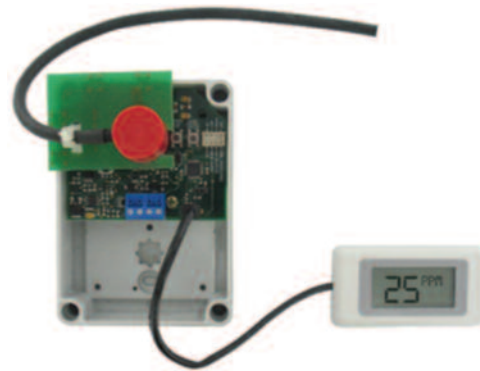


Figure 8


Appendix IV: Menu Flowchart and Calibration

NOTE - WHEN IN THE MENU, THE DISPLAY WILL RETURN TO THE HOME POSITION IF NO KEY IS PRESSED WITHIN 30 SECONDS.


HOME POSITION, UNIT READS GAS CONCENTRATION PPM



PRESS AND HOLD ZERO AND SPAN KEYS FOR 5 SECONDS TO ENTER THE MAIN MENU.



MODBUS/BACNET ADDRESS, VIEWABLE ONLY.

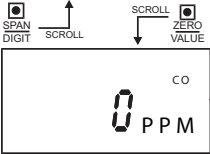

CALIBRATION MODE



PRESS ZERO AND SPAN TO ENTER CALIBRATION MODE



PLACE THE UNIT IN AN AREA THAT CONTAINS FRESH AIR (NO CO OR NO2 GAS), ALLOW 3 MINUTES TO STABILIZE.

PRESS THE ZERO KEY FOR 5 SECONDS. THE ZERO VALUE IS STORED AND THE DISPLAY SEQUENCES TO THE SPAN GAS CALIBRATION VALUE



TO ADJUST THE DISPLAY TO SET THE DESIRED SPAN CALIBRATION VALUE, PRESS THE DIGIT KEY TO SCROLL THROUGH THE DIGITS. THE DIGITS WILL BLINK AS THEY ARE SELECTED.

ADJUST THE VALUE OF THE DIGIT USING THE VALUE KEY

HOOK UP THE UNIT TO THE SPAN CALIBRATION GAS USING THE CALIBRATION ADAPTER A-507AS SHOW IN FIG. 8 SPAN GAS FLOW IS TO BE BETWEEN 0.5 TO 10. SLP.M. ALLOW GAS TO FLOW FOR AT LEAST 3 MINUTES.

PRESS AND HOLD THE SPAN KEY FOR 5 SECONDS



DISPLAY READS "CAL" THEN "PASS" AND RETURNS TO HOME POSITION




IF THE SENSOR OUTPUT IS NO LONGER SUFFICIENT FOR CALIBRATION, THEN THE DISPLAY READS "BAD SEN". THE SENSOR MUST BE REPLACED




COMMUNICATION SETTINGS
FACTORY SETTING IS AUTO BAUD ON.



PRESS AND HOLD ZERO AND SPAN UNTIL "SET" TURNS ON




PRESS ZERO OR SPAN TO SWITCH BETWEEN AUTO BAUD ON OR OFF



AUTOBAUD MUST BE SET TO "NO" TO SET BAUDRATE, PARITY AND STOP BIT SETTINGS

PRESS AND HOLD ZERO AND SPAN UNTIL "SET" TURNS OFF



SET BAUD RATE



PRESS AND HOLD ZERO AND SPAN UNTIL "SET" TURNS OFF



USING ZERO AND SPAN KEYS, SET BAUDRATE TO DESIRED VALUE

SET PARITY




PRESS AND HOLD ZERO AND SPAN UNTIL "SET" TURNS ON




PRESS ZERO OR SPAN TO SWITCH BETWEEN NO PARITY OR EVEN OR ODD PARITY


PRESS AND HOLD ZERO AND SPAN UNTIL "SET" TURNS OFF



SET STOP BITS




PRESS AND HOLD ZERO AND SPAN UNTIL "SET" TURNS ON



USING ZERO AND SPAN KEYS, SET STOP BIT TO 1 OR 2

SCROLL TO TOP MENU, MODBUS/BACNET ADDRESS

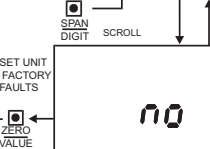

RESET UNIT TO FACTORY DEFAULTS



PRESS ZERO OR SPAN TO SWITCH BETWEEN YES OR NO



IF RESET IS SET TO YES, PRESSING ZERO AND SPAN WILL CAUSE A FACTORY RESET, AND DISPLAY WILL RETURN TO THE HOME POSITION

IF RESET IS SET TO NO, PRESSING ZERO AND SPAN

